

## **Bridge Design Details 6.5 February 2020**

## **Piles at Abutment Corners**

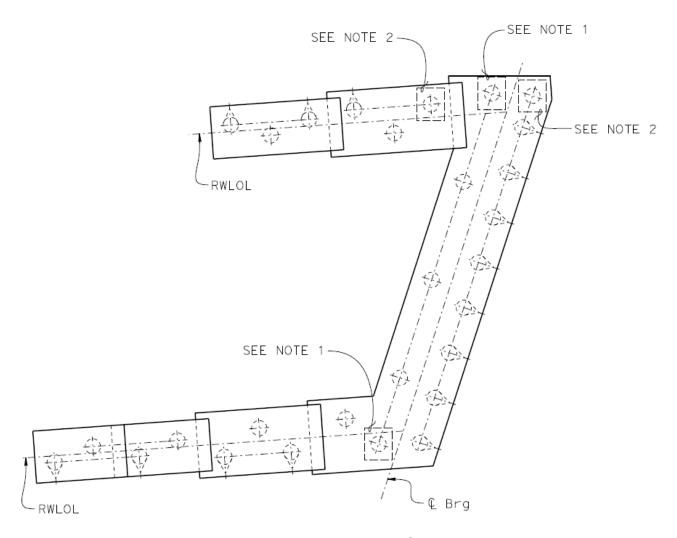


Figure 6.5.1 Piles at Abutment Corners

## Notes:

- 1. Battered pile at this location is unnecessary. Pile should be vertical.
- 2. Use vertical pile rather than battered piles at sharp acute corners where it may be difficult to drive battered piles.