


**Use when the
Exit Number/Suffix is
1 to 2 numbers or letters.**

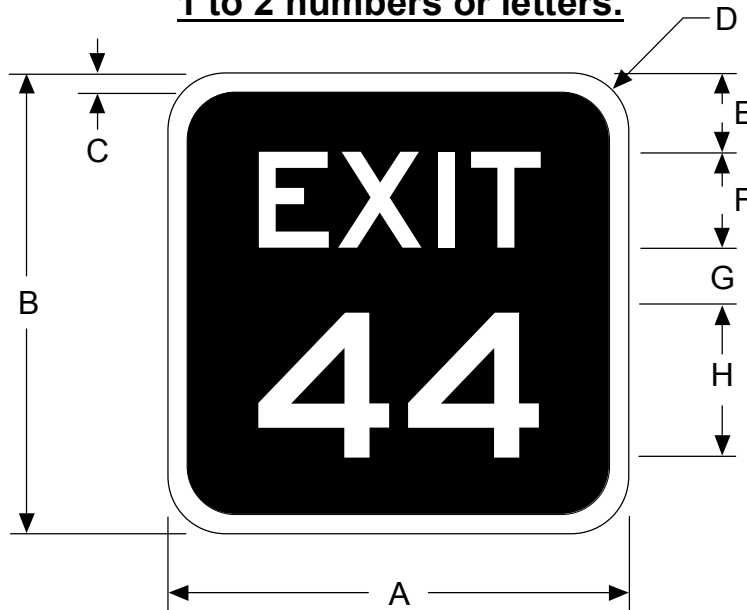

G70-4 (CA)

NUMBER/SUFFIX

The exit number/suffix should be the same height as the lower case lettering used for the destination message on the guide sign. When the destination message is all capital lettering, the exit number/suffix should be the same height as the capital lettering.

When the exit number includes a suffix letter, the suffix letter is separated from the number by a space.

ENGLISH UNITS

A	B	C	D	E	F	G	H
24	24	1-1/4	3	5-1/2	4E	3	6E
30	30	1-1/2	3	6-1/2	5E	4	8E
36	36	2	3	7-1/2	6E	5	10E
42	42	2	6	8	8E	6	12E
48	48	2-1/2	6	8	10E	7	15E

**COLORS: BORDER & LEGEND - WHITE (RETROREFLECTIVE)
BACKGROUND - GREEN (RETROREFLECTIVE)**